01 Foreword

1.1 Acknowledgements

Thank you for choosing our products. Product MID (Mobile Internet Device) is a kind of mobile Internet equipment, delicate and cabinet, easy to carry. Equipped with a high resolution 1024x600 capacitive 5- touch screen, this MID supports high-definition videos and images, installation of multiple Office Micro Software, entertainment and other applications.

The dazzle cruel interface can provide you new user experience.

This manual introduces the various functions, using skills and announcements.

Please read the manual carefully before using MID.

1.2 Announcements

Maintenances

- Please keep MID dry. Keep the equipment and battery charger away from water, vapor and wet hand in case of short circuit, corrosion or equipment failure.
- Keep the equipment, battery and charger away from strongly impact or vibration in case of equipment/battery/charger fault, fire or explosion.
- Keep the equipment, battery and charger away from very high/low temperature region in case of equipment/battery/charger

fault, fire or explosion.

- Do not hit, throw or acupuncture product MID, and avoid dropping, extruding and bending MID.
- Keep the equipment and accessories authorized, otherwise the equipment and accessories would not be under our company warranty scope.

1.3 Safety Tips

Before you use the MID, please read this section of information and keep your child aware of this information. For detailed information, please refer to the safety guidelines.

- Do not use MID during driving for safety.
- In medical sites, please follow the relevant regulations by turning off your MID when you are in medical sites.
- Please turn off your MID or turn on planes mode when you are boarding, to avoid wireless signals jamming aircraft control signal.
- Please turn off your MID near the use of high precision electronic equipment, otherwise it may lead to electronic equipment disability.
- Do not take apart your MID or accessories without authorizing. Only authorized institutions can repair this MID.
- Please keep MID away from magnetic equipment. The

radiation of MID will erase the information of the magnetic storage device.

- Please don't use MID under high temperature or in flammable areas (example: gas station).
- Please keep your MID and accessories away from children without supervising.
- Please obey the relevant laws and regulations when you use your MID, and respect others lawful rights and privacy.
- Please obey the relevant specification of this manual when you use USB cable. Otherwise it may damage your MID or personal computer.
- Please don't use your MID in the damp environment such as bathroom etc. keep your MID from being soaked or flushed by the liquid.
- Please choose the appropriate volume, use headphones should not be too big voice, if feel tinnitus, lower the volume or stop using it.

1.4 Acronym/terms

Acronym/terms	Full name	Instruction
MID	Mobile Internet Device	Mobile Internet terminals
WIFI	Wireless Fidelity	Based on the IEEE 802.11B standard wireless LAN
TF	Trans Flash	Also call : Micro SD

02 Brief Description of MID Series of Products

2.1 MID Overall Drawing

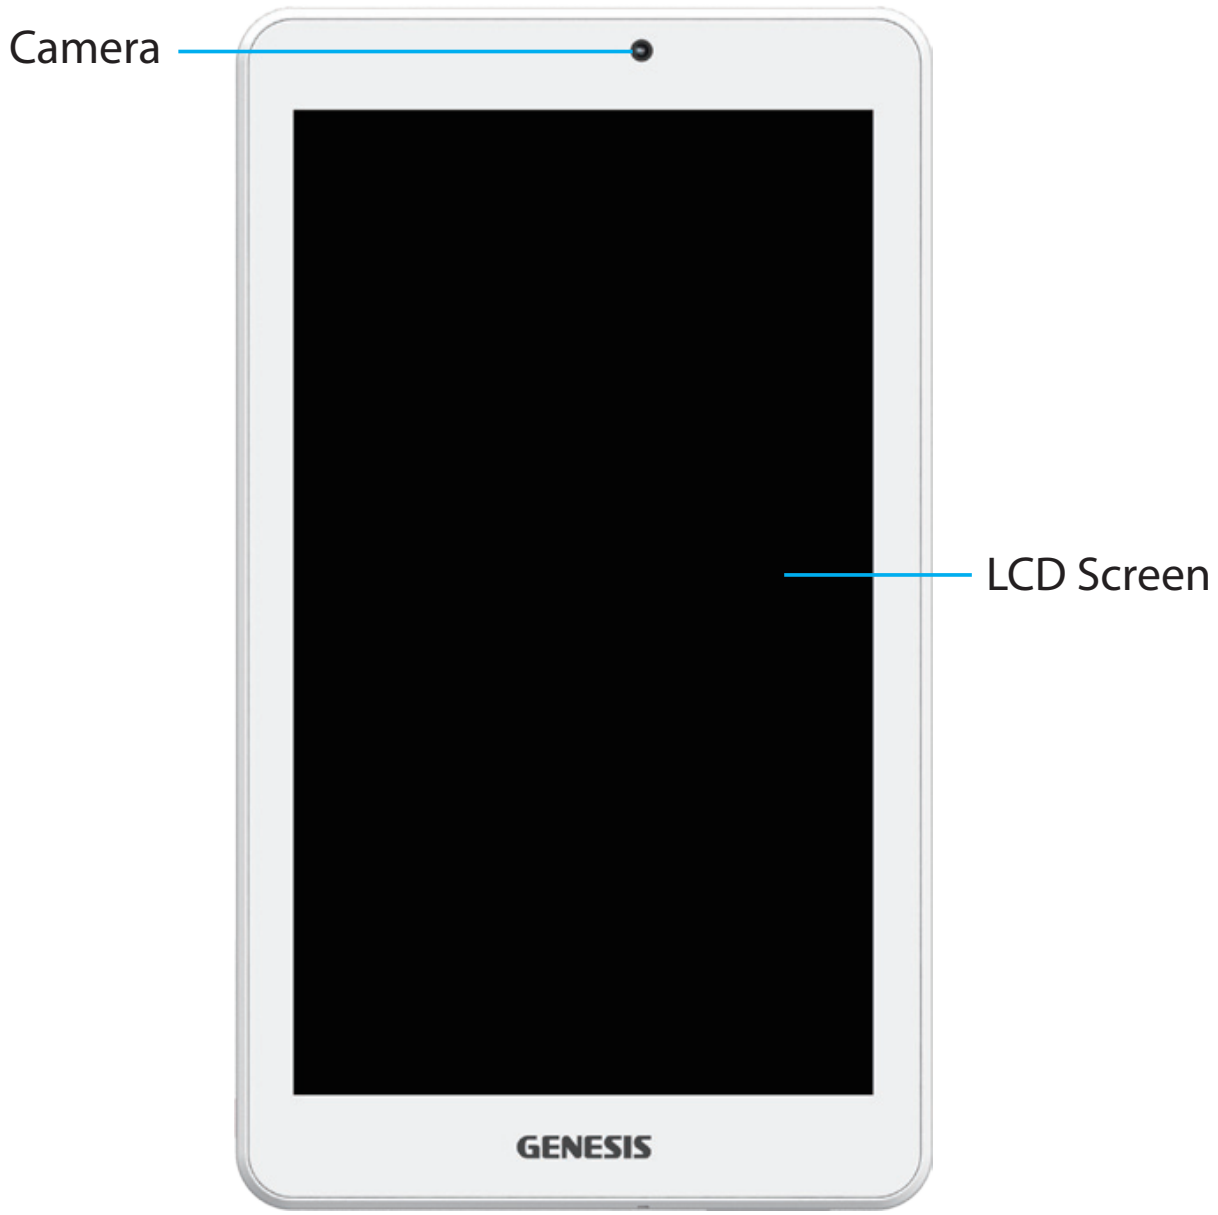

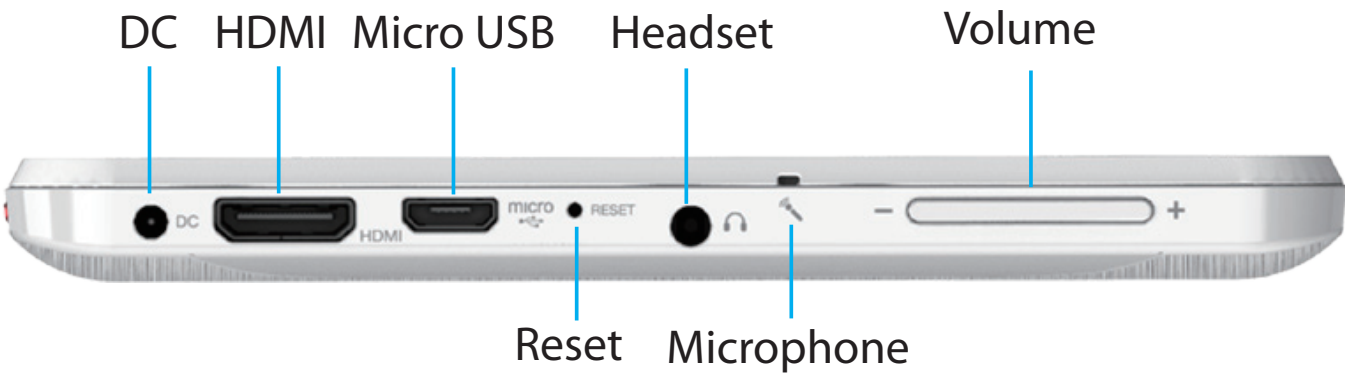
DC
HDMI
Micro USB
Headset
Volume
DC
HDMI
micro
RESET
Reset
Microphone

Back Camera
1.3
MEGA PIXELS
Speaker
GENESIS
GT-7303
LED LOGO
TF Card
Power
Skyworth

2.2 MID Accessories Introduction

Packing List
Your MID packing box includes the following items

- MID complete machine
- USB adapter
- USB cable
- Ear-Mic piece
- User manual

2.3 MID Use and preparation

Battery Management and charging
Before using MID, please charge up the battery.

1. Use the USB adapter to charge up your MID battery. This tablet adopt built-in lithium polymer battery, must be choose standard adaptor for charging.
2. The first two times charging please keep about 6 hours, after that please charge for 4 hours at least.
   Please charge in the following conditions:
   A: The battery icons shows have no power.
   B: The system automatically shut down, shut down after boot soon.
   C: Press operation buttons have no response.

   Remark:
   1. If you haven't use this tablet for a long time, in order to avoid power consumption caused damage, please

charge/play the battery once a month.

2. After low battery shut down, connect USB adaptor, device will remind low battery, charging, need to wait some time until the battery is enough power to enter into main menu.
3. Device charging should be in standby status for each normal charging time.

With device and screen consumption, it may cause longer charging time.

2.4 MID State and information

Notice Icon

Please press and hold "Lock" icon and slide to "unlock" icon on the screen to unlock notice icon. Click the requisite view options and check the detailed information.

Notice panel

Notice icon implies new messages, the settled alarm clock, schedule, and SD card inserting etc. You can open the information panel to check specific information by pressing the right bottom corner.

03 Quick start

3.1 Boot and shut down

Boot

After long pressing for 2 seconds on the power button, you can see the boot logo.

The system access into screen locking status after opening, please press the Power On/Off button to refresh, and slide up the unlock icon on the screen.

Power off

1. Long press the **Power On/Off** button, then "Power off" options pop up.
2. There is silent mode in device options, **Power off** and **Cancel**.
3. Click Power off.

3.2 Screen of opening and closing

It will be closed during the screen idling.

- After idling period of time, screen will be automatically closed to save the battery.
- When the screen is on, you can press the power button to shut down the screen immediately.

Opening in screen closed condition.

When the screen is off, you can press **Power On/Off** button to activate it.

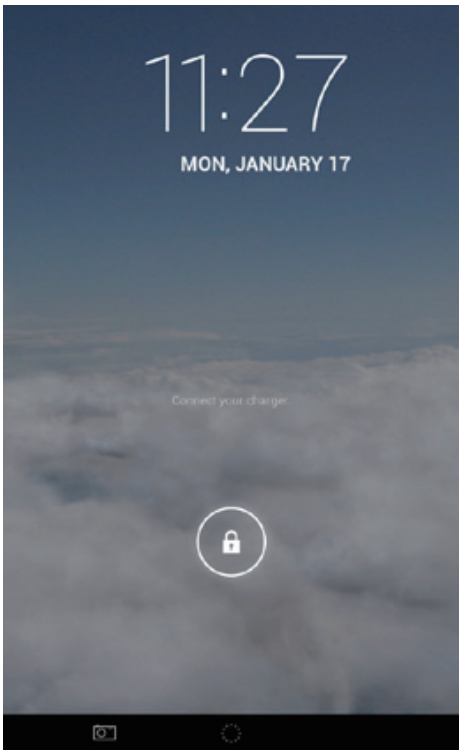

3.3 The use of touch screen

MID operation mode

There are several ways you can browse screen, menu and application, etc on the MID.

Click

When you want to use the screen keyboard for input, you can choose applications on the homepage as long as you click a project with finger.

Press

If you want to open an available option (such as the text box or web link) or move shortcut and main program menu on the homepage as long as you press the items.

Fast sliding or sliding

Fast sliding or sliding said in his fingers making rapid vertical or horizontal drag action.

Drag

Before you start to drag, you must use your finger to press strongly on it for a short time. When dragging it to the position you want, you can loosen your finger.

Rotating

For most pictures, you can only turn to MID then screen will translate from lateral direction to straight. Such as in the input text, watch movies, etc.

3.4 Page interface

The main menu screen shows all the applications. You can use the application, set shortcuts and customize your homepage interface wallpaper, etc.

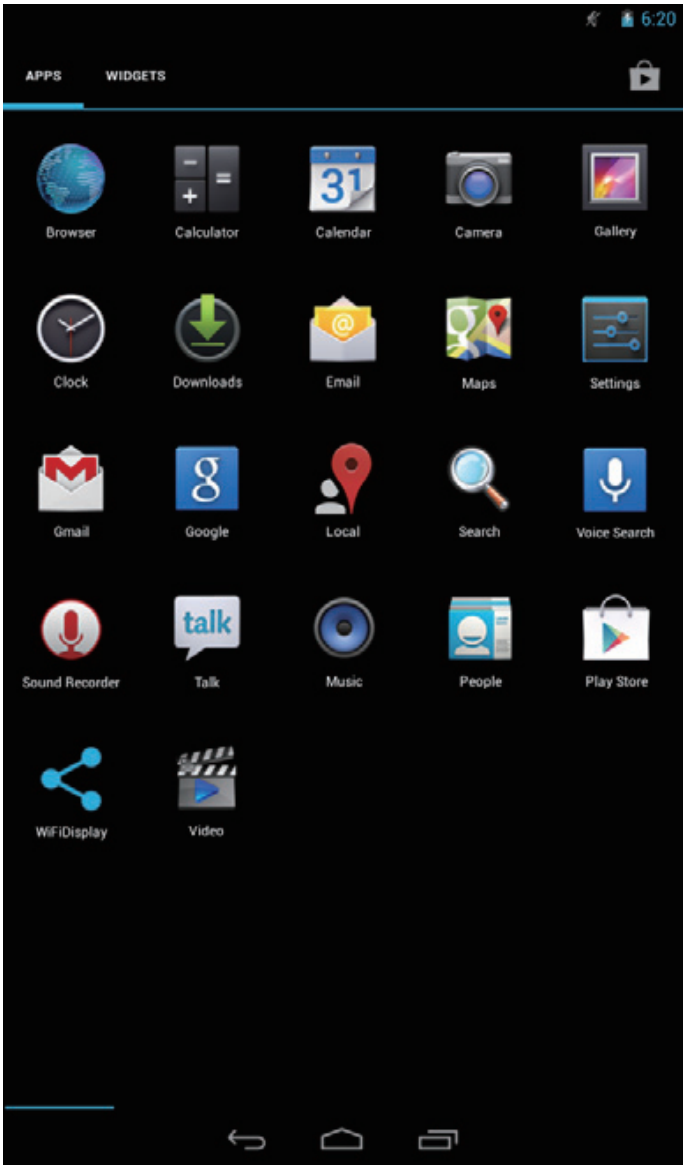

In the main interface, you can management main interface software ICONS: long press the icons for 3 seconds, after the icons become bigger, then you can drag anywhere in the interface and loosen your finger.

Delete icons: long press the icons for 3 seconds, drag the icons to the top of tablet PC where **XRemove** stands, loosen your hand, after that you can delete icon.

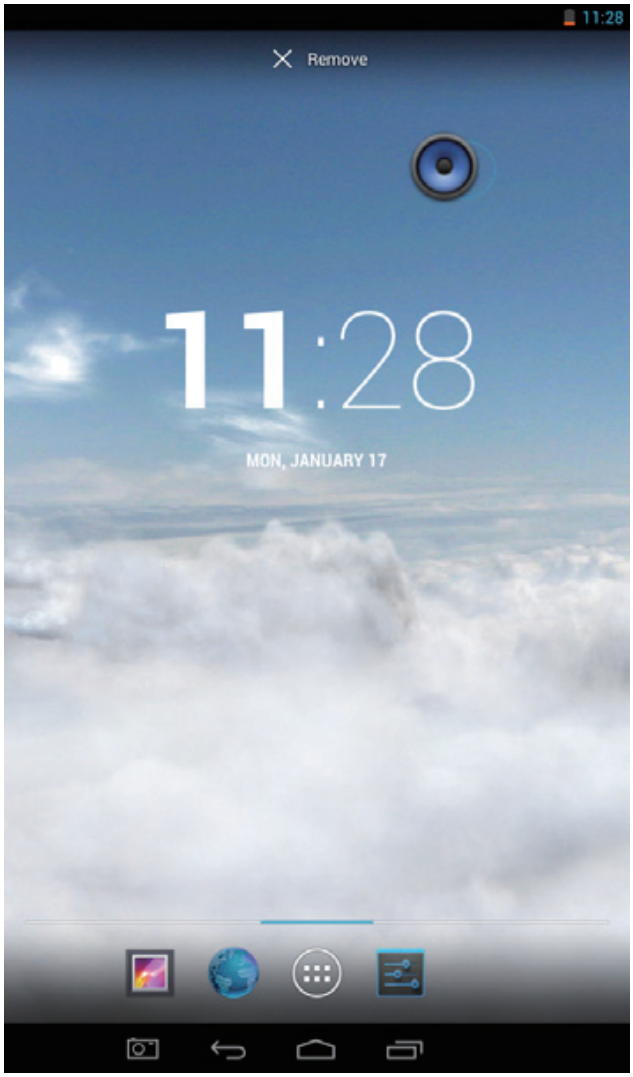

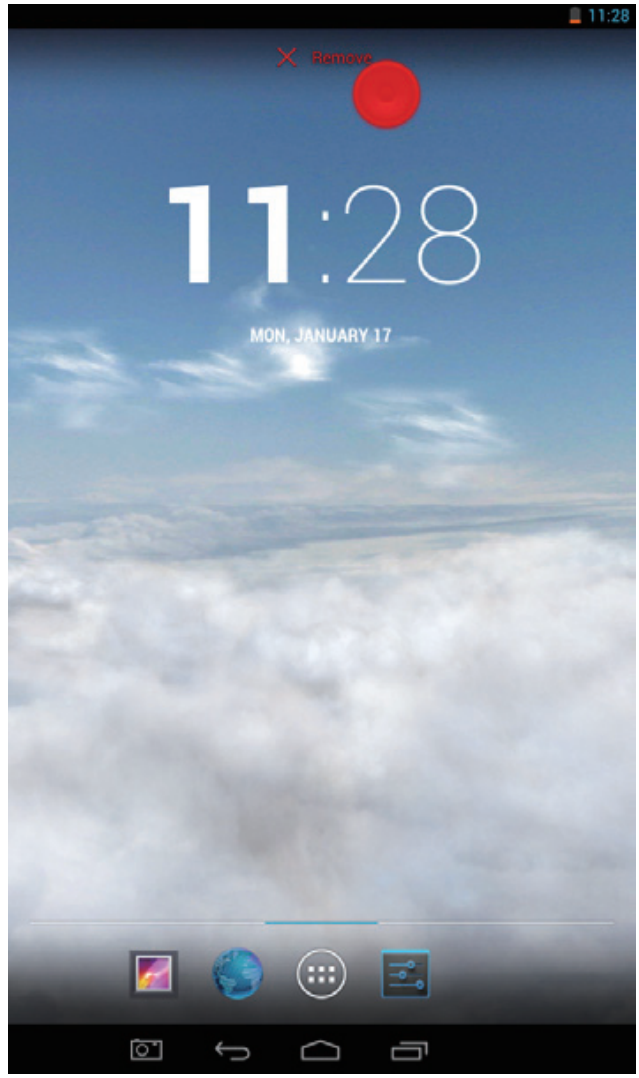

3.5 Function of icons

- **Menu icon**
  Touch this icon to access options of a selected function.
- **Home icon**
  Touch it to open home screen. If you're viewing the left or right extended Home screen, Touch it can enter the central screen.
- **Back icon**
  Touch this icon to return to the previous screen.

3.6 Use touch panel

Touch-screen tips

- **Touch**

To act on items on the screen, such as application and settings icons, to type letters and symbols using the onscreen keyboard, or to press onscreen buttons, you simply touch them with your finger.

- **Touch & hold**

Touch & hold an item on the screen by touching it and not lifting your finger until an action occurs. For example, to open a menu for customizing the Home screen, you touch an empty area on the Home screen until the menu opens.

- **Drag**

Touch & hold an item for a moment and then, without lifting your finger, move your finger on the screen until you reach the target position.

- **Swipe or slide**

To swipe or slide, you quickly move your finger across the surface of the screen, without pausing when you first touch it (so you don't drag an item instead). For example, you slide the screen up or down to scroll a list.

Lock screen

When Screen lock in Security setting is enabled, press Power key to lock the handset. This helps to prevent accidental touching of

keys and as well as power saving. When Sleep function in Display setting is enabled, after the handset device has been idle for preset period, the screen will be locked automatically to save power.

Unlock screen

Press Power key to switch on the handset device. The lock screen appears. Touch and slide left to open camera application. Touch and slide right to unlock screen, and the screen being locked last time will show.

3.7 Equipment basic settings

Settings: Click settings icons, enter settings interface.

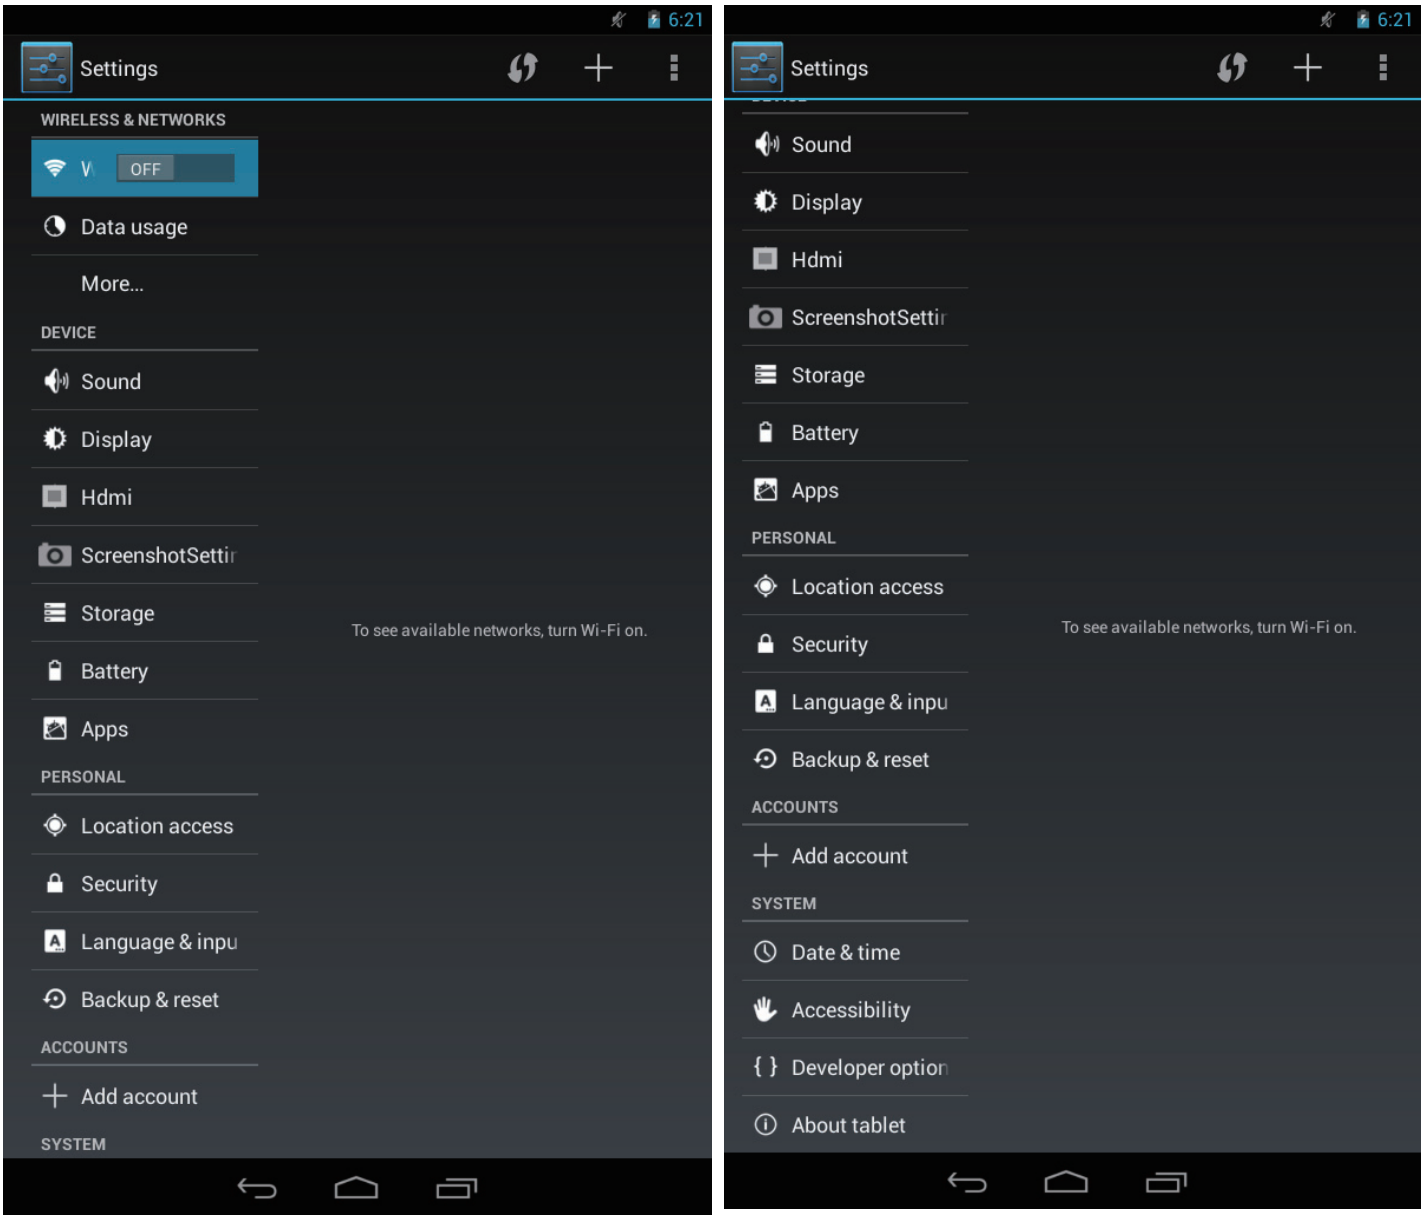

3.7.1 Silent mode, volume, notification, ringtone, audible selection, screen lock sounds.

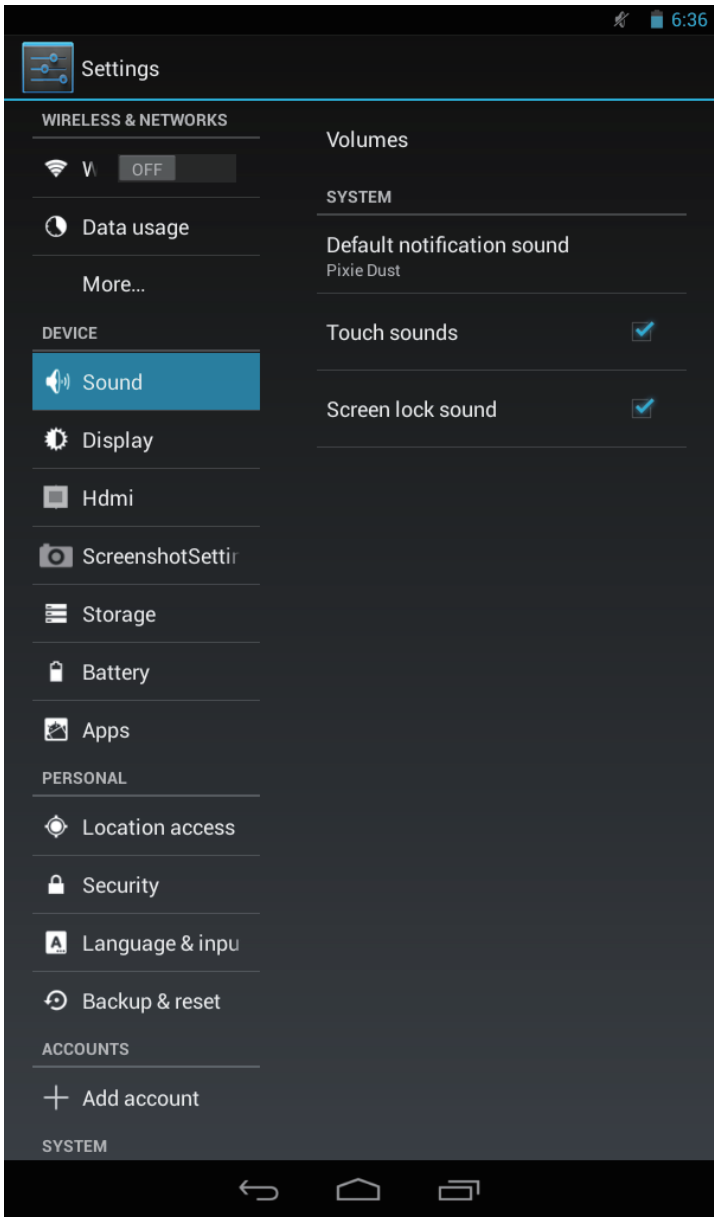

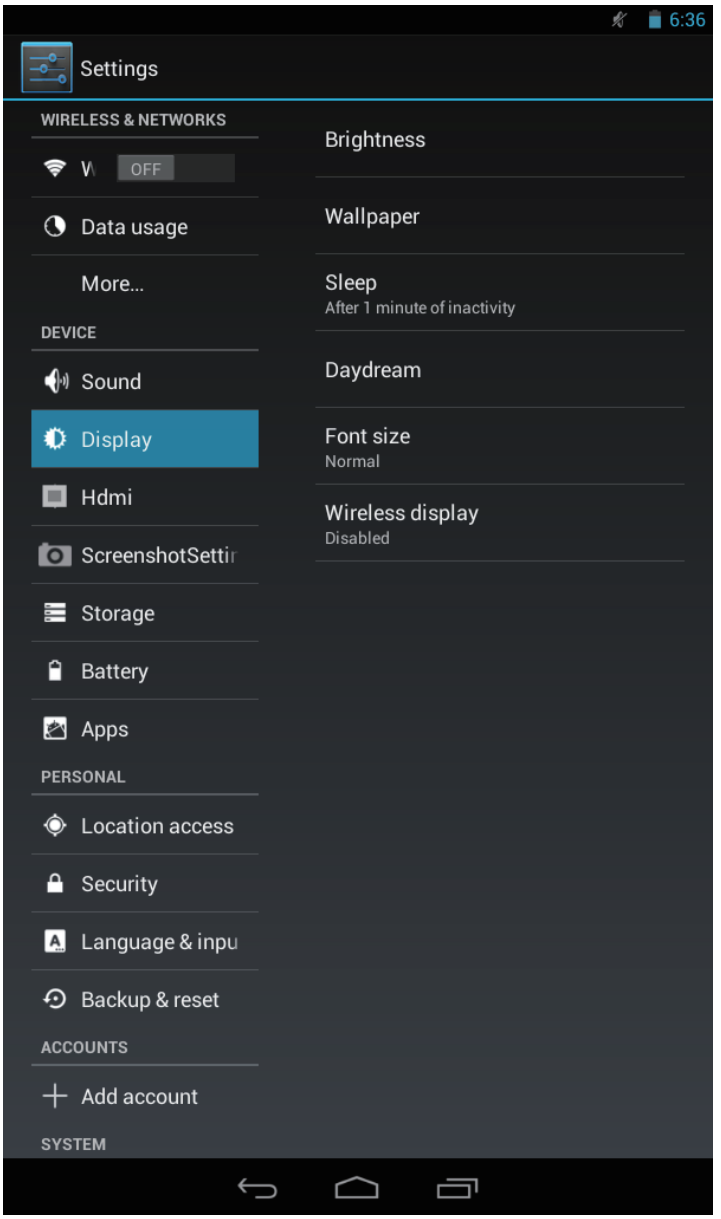

3.7.2 Application

Manage applications

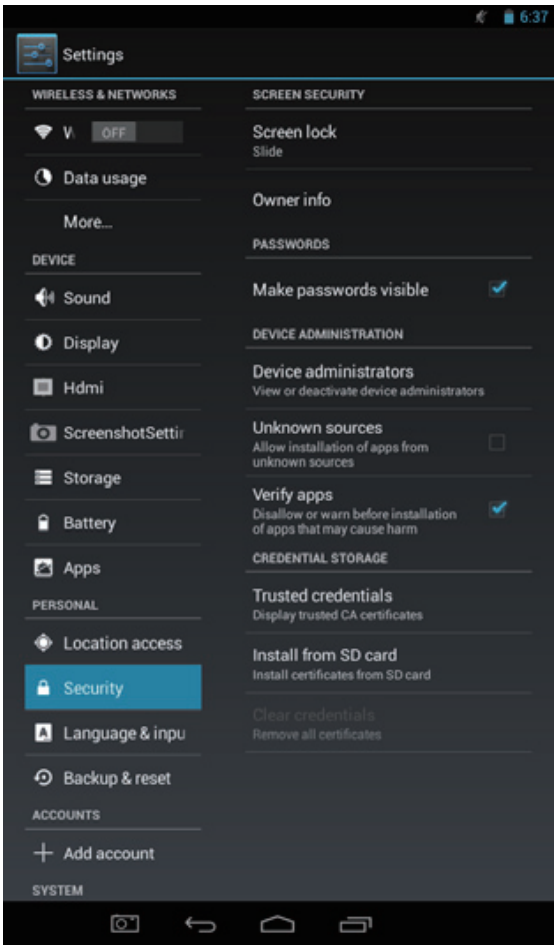

Unknown sources: Click "Unknown Sources", then click "OK".
Manage application: manager and uninstall application.
Remark: When you firmware upgrade, please close the USB connect.

How to uninstall?

1. Enter

"Settings">"Application">"Manage application" and then there will be installed the program list.
2. Click you want to uninstall icon, will enter the following interface.
3. Click Uninstall, then you can delete the application.

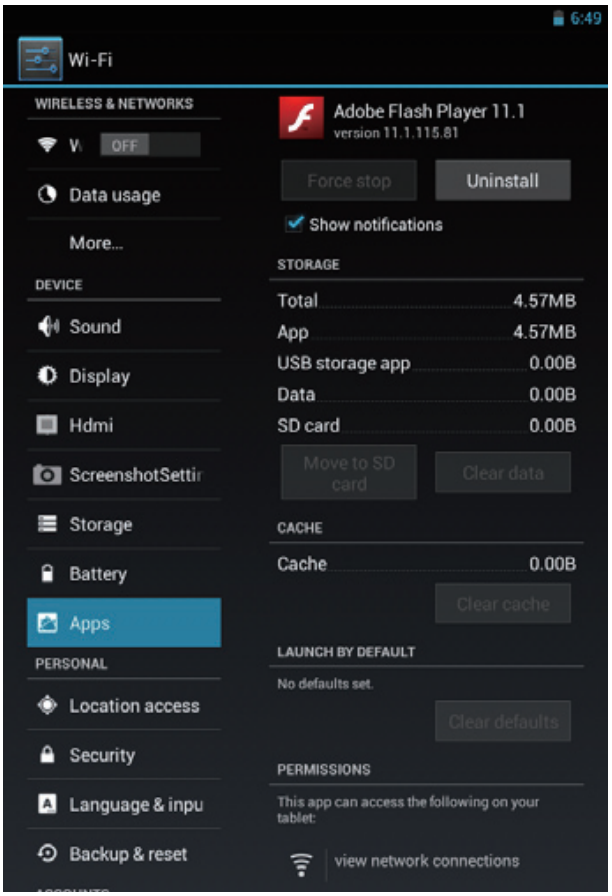

3.7.3 Privacy

Restore to factory settings

When there are great errors in your MID or you forget the passwords, you can use **Restore to factory Settings** to restore them to Initial State.

Methods:

1. On the homepage interface, press **Menu** key.
2. Click **Settings**.
3. Click **Backup & reset**.
4. Click **Factory data reset**.
5. Wait for the system to restart.

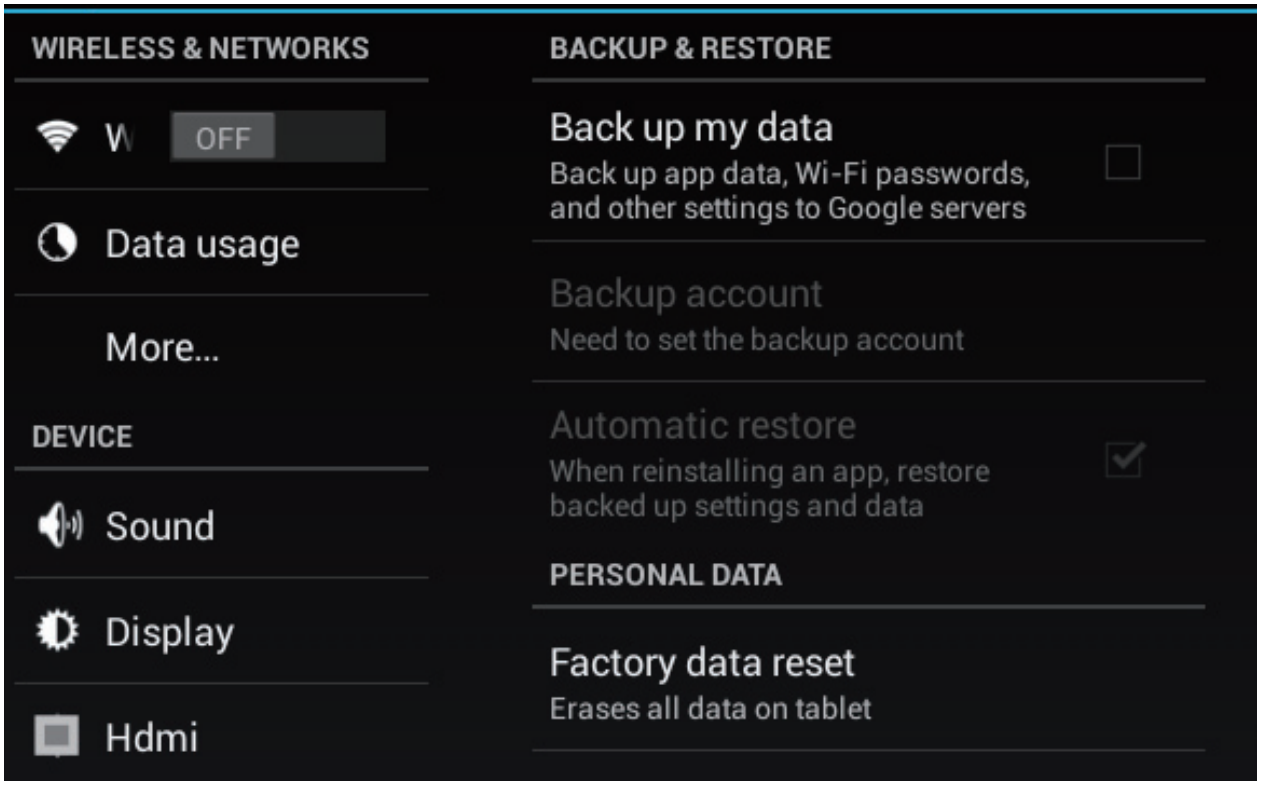

3.7.4 Storage

Remove TF card, view of the available storage space.

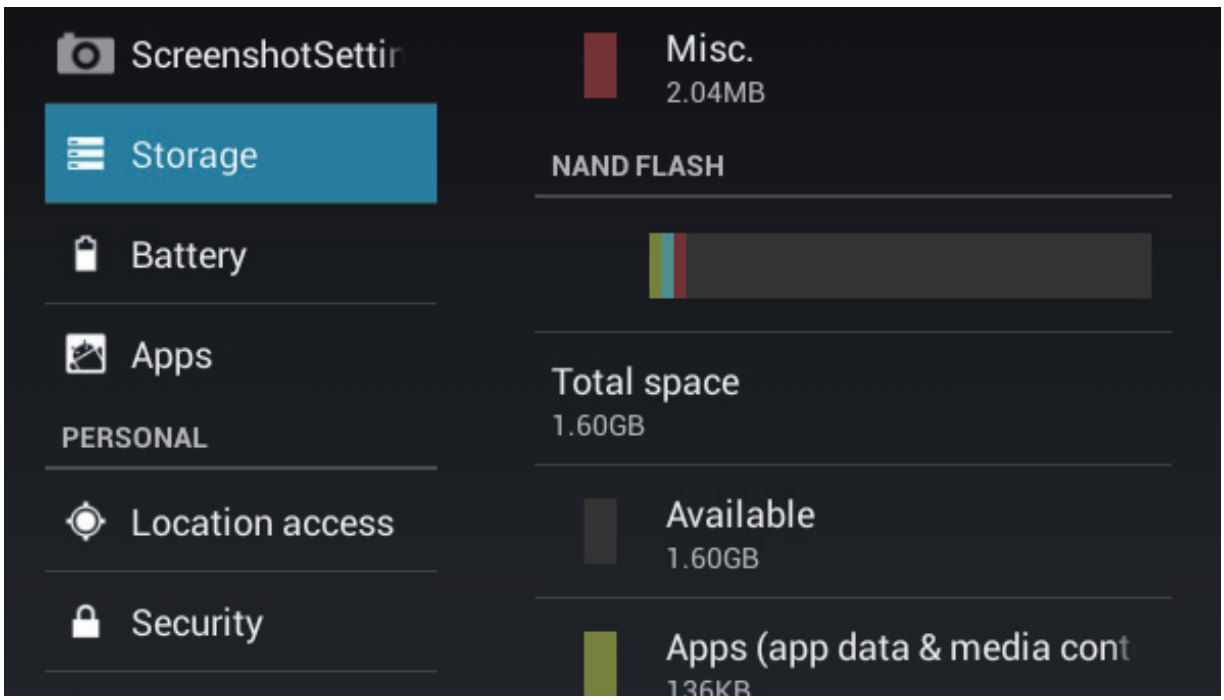

Remark: Please touch option "delete SD card", so that can remove SD card safety.

3.7.5 Language & Keyboard

Settings**:** Language, text input and automatic error correction options.

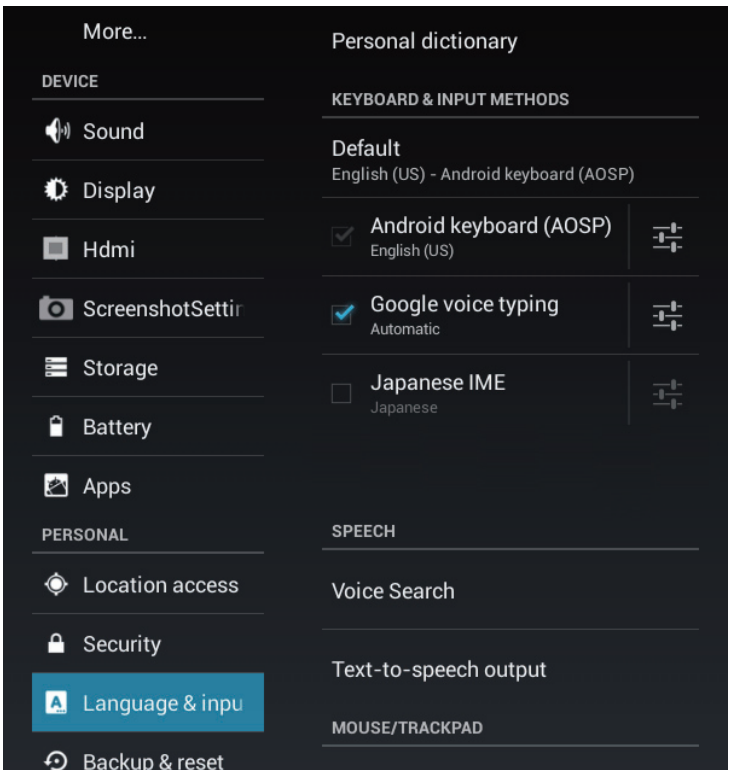

Select Language: 54 kinds of national languages are available.
Remark: Android system can support 54 kinds of languages, now menu interface just support 14 kinds of languages.
Android keyboard: Android keyboard setting
Sound on Key-press
Auto-capitalization
Show suggestions: Display suggested words while typing.
Auto-complete: Spec bar and punctuation automatically insert highlighted word.

3.7.6 Date & time setting

Set date, set time, select time zone and select date format.

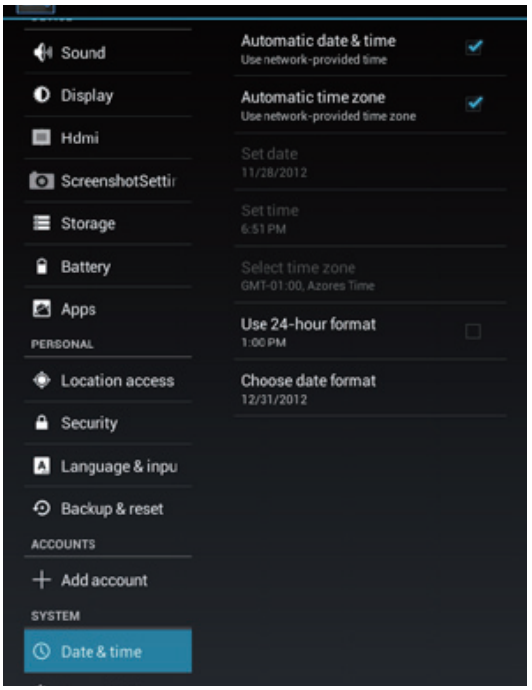

3.7.7 About device

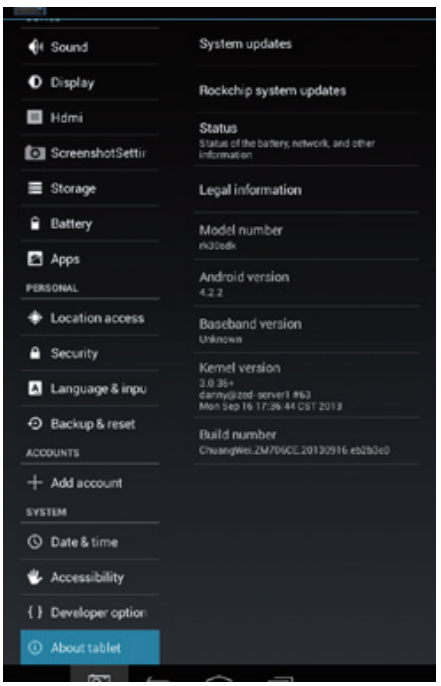

3.8 APPS install and uninstall

3.8.1 APPS install

This Tablet supports Android APPS in Play Store by third party, most APPS can be installed from the network, which can copy to NAND FLASH or SD card.

Remark: Some 3rd APP must install properly by memory card, downloaded 3rd party app may not install properly on device.

3.8.2 APPS uninstall

Click Settings, choose Apps, select the Apps you would like to uninstall then click "uninstall" ----> click "OK" as follows:

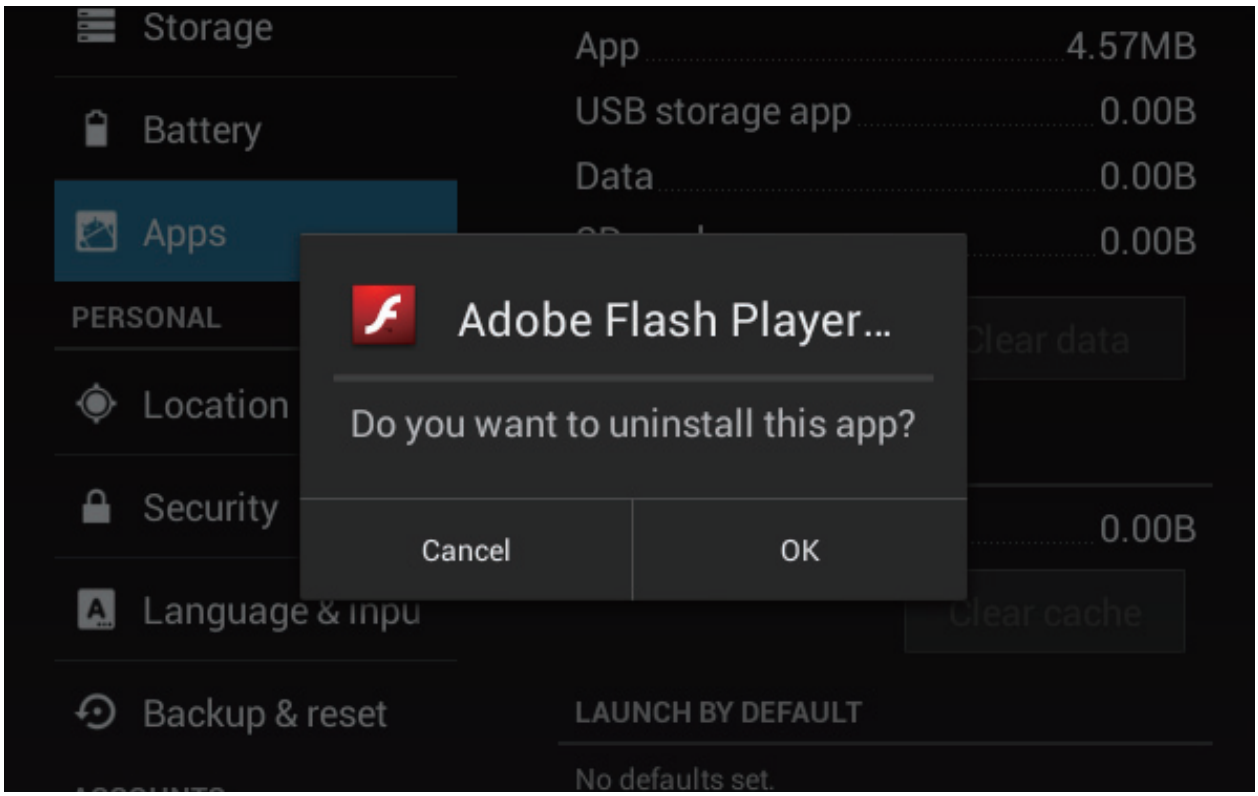

04 Establish connections

4.1 USB connection

1. Use USB cable to connect MID with computer. Notice massage will appear in Notice bar.
2. Drag up the icon in the lower left corner.
3. In the notification panel, click on the USB connected, then click Turn on USB storage.
4. Then the USB connection will be done successfully.

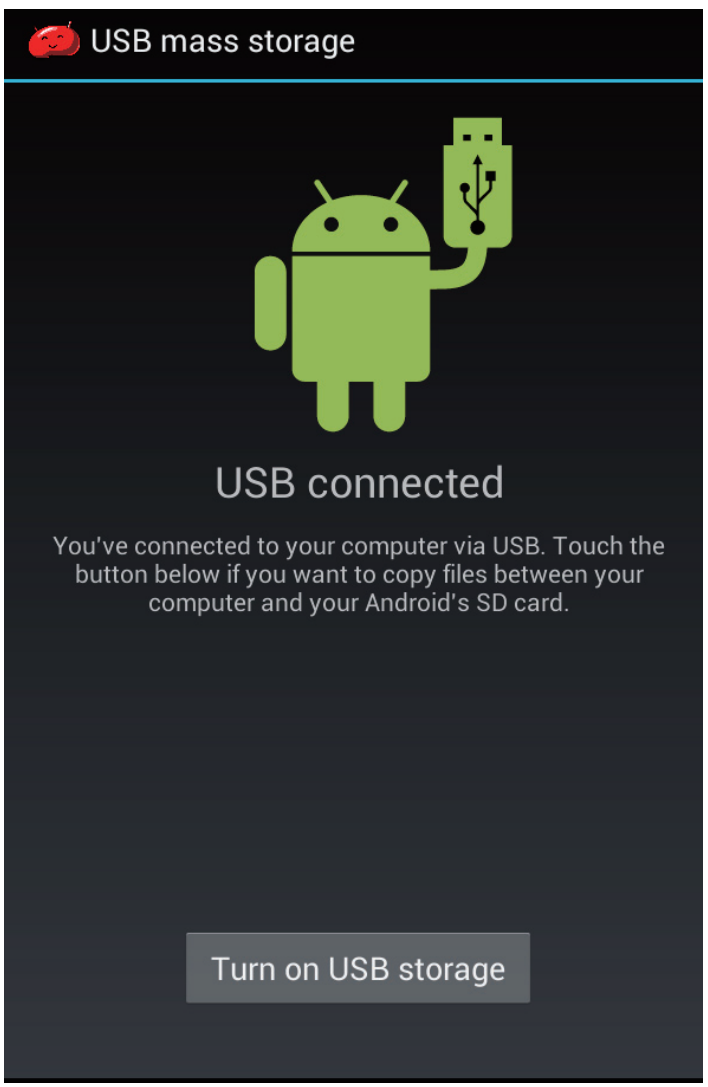
USB mass storage
USB connected
You've connected to your computer via USB. Touch the button below if you want to copy files between your computer and your Android's SD card.
Turn on USB storage

USB mass storage
USB storage in use
Before turning off USB storage, unmount ("eject") your Android's SD card from your computer.
Turn off USB storage

4.1.1 Copy files to memory cards.

1. Use a USB cable to connect MID with computer.
2. After setting the store setting, connect MID with computer successfully.
3. Open My Computer of your computer, "portable disk (x)" can be seen.
4. Select the intended files and copy to the "portable disk (x)".
5. After copying the files, click "safe deletion hardware" icon of your computer task bar to unload.

4.1.2 Content of MID Storage Device

1. **NAND FLASH** storage device, MID itself has 4G storage space for keeping files.
2. TF removable storage card.
3. The above mentioned two storage devices can connect your computer by using USB.

Note: When you connect the USB cable with MID, enabling the **USB storage device**, you will not get access to Internal Memory; If you want to get access to Internal Memory, please disconnect the USB device.

4.1.3 Storage card

Copy files to storage card

You can transfer files between MID and computer such as music and pictures, etc. If you want to check the files, please click the file

browser, then you can browse the contents of the SD card.

Delete the files on the MID memory card.

1. Select the file you want to delete.
2. Click the file you need to delete, then the file menu will popup.
3. Click "**delete**"

4.1.4 Input text

Use the screen keyboard

When you start programs or select text edit box which needs to input text or number, the screen keyboard will appear.
There is an optional input method of keyboard below:

1. Android keyboard
2. The third party input method (The user can install any input methods independently)

Select the input method which you want to use.

For pre-installation, Android keyboard will be displayed when you want to input word.

1. On the homepage interface, press menu button and click "Settings".
2. Click the Language& input.
3. List all installed input methods of MID in the text setup area.
4. Tick the input method you want.

Use and switch input method

1. On the text input interface, hold text edit box area until "edit text menu" pop ups. Then click the input method.

2. Select the input method you want.

4.2 Linking to the Networks and devices

Your phone can connect to a variety of networks and devices, including mobile networks for voice and data transmission, Wi-Fi data networks. You can also connect your phone to a computer, to transfer files from your phone's SD card and share your phone's mobile data connection via USB.

Connecting to mobile networks

When you assemble your phone with a SIM card, your phone is configured to use your provider's mobile networks for voice calls and for transmitting data.

Connecting to a computer via USB

You can connect your phone to a computer with a USB cable, to transfer music, pictures, and other files between your phone's SD card and the computer.

4.3 WIFI connection

You can connect MID to Wi-Fi network:

1. In the homepage interface, click the **MENU** button, then settings menu will pop up.
2. Click **settings**.
3. Click **wireless and network**.
4. Drag **Wi-Fi** to "ON". MID will automatically scan available Wi-Fi networks.
5. Choose the Wi-Fi network you prefer. If it is private Wi-Fi network, then the password having been set should be input.

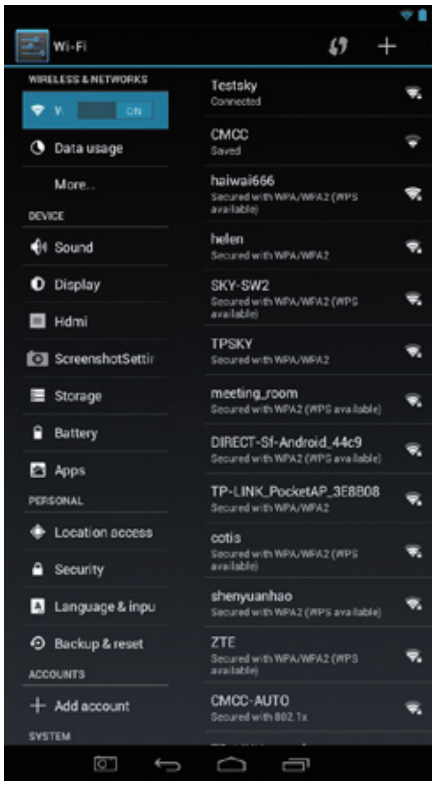

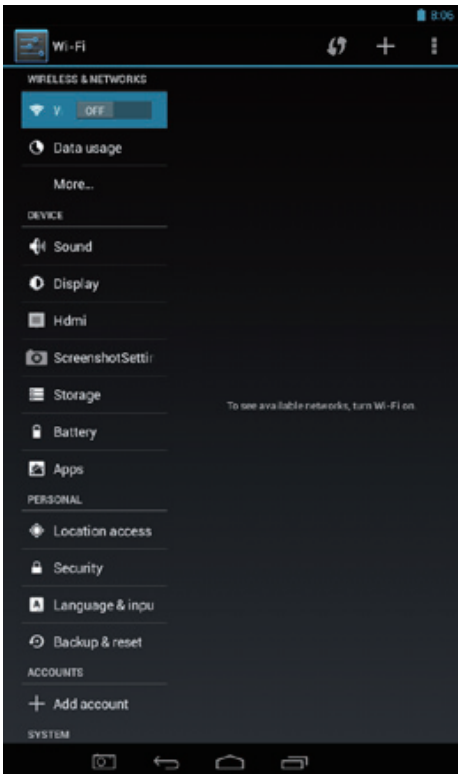

05 Communication

E-MAIL

E-mail Settings

E-mail applications accompany with email settings guide, it can add the common Web email service providers (e.g. Gmail, Yahoo, Hotmail and 163 etc) except for POP3 or IMAP email account.

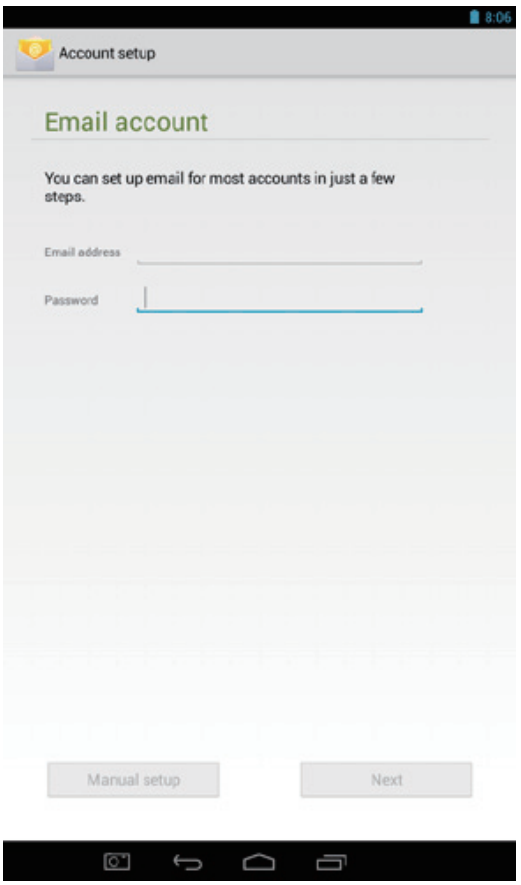

Note: Before setting the email, please ensure that the network has been linked.

Mailbox setting guide

1. Click the **E-mail** icon, then the mailbox setup guide will appear.
2. Click the **next step** button.
3. Sign in your email account and password.
4. Click the **next step** button, and select your mailbox type: POP3 or IMAP.
5. Click **next step** button to check whether email server is available.
6. Input your account and click **completion**.
7. If the mail account is available, it will automatically enter your inbox.

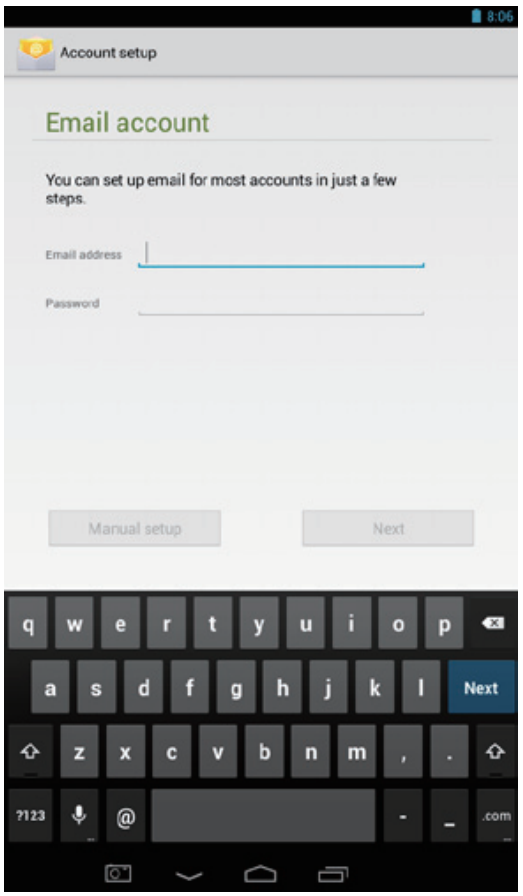

Delete email accounts

You can delete the POP3 or IMAP email account having been set in

your mobile phone
1. Click **E-mail**
2. Enter to your E-mail box
3. Press Menu key
4. Click **accounts**
5. Hold the mail account you want to delete.
6. Menu list popping up, then click "**Remove account**"
7. Click "**OK**" to remove it.

Send E-mail messages
1. Click **E-mail** and get access to your inbox.
2. Click the inbox to enter in. With emails being refreshed automatically, emails can be read from time to time.
3. Press the Menu button, menu interface will pop up.
4. Click "**compose**" to write a new mail.
5. Input the recipient in the recipient column.
6. Input the theme of your e-mail and the content of your e-mail.
7. If you want to add attachments, press the menu button, then the menu options will pop up.
8. Click "**add attachment**"
9. Select attachments you want to send (e.g. video, images, etc.)
10. Click "**Send**" to send the e-mail.
Note: If you have more than one account, click that account title before you click the main **menu** key to write an e-mail.

06 Multimedia

6.1 Support the file format

Your MID supports the following formats.

Music file format

- MP3
- AAC(AAC, AAC+ and AAC-LC)
- OGG
- WMA
- WAV

Video format

- AVI(H.264)
- RMVB
- MKV
- MEPG4
- MOV
- VOB
- FLV
- 3GP

6.2 Music

There are four default categories in music player: artist, album, songs and playlist and now playing. Choose a category to check list contents. If you enter a category, always choose until you have to play songs. For example, if you choose the artist category, you will see a list of artist names arranging in alphabetical order from A to Z. If you choose an artist, the list will be presented with a list of the artist album songs.

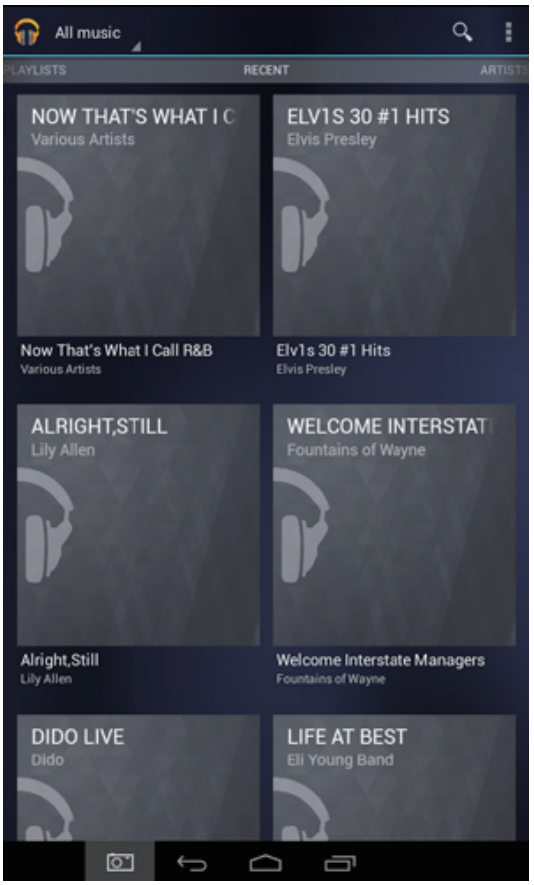

Visit and play music

1. Click **music.**
2. Click **songs**, also can click **artist, album** or **song list.**
3. Choose one song to play.

Add songs to the new playlist

1. Click **music**.
2. Click **songs**.
3. Hold the song you want to add to the playlist.
4. With music setting menu being pop up, click **add to play lists.**
5. Click **New**.
6. Input a name for the playlist.
7. Click **Save**.

Delete songs in the playlist

1. Click **music**.
2. Click **songs**.
3. Hold the song which you want to delete in the playlist.
4. With music setting menu being pop up, click "**delete**".

6.3 Camera

Photo taking function

1. Click **Camera.**
2. The system enters the Camera interface.
3. Click **Shoot** button to have photos taken easily.
4. Other functions like sizes, storage locations, white balance and focusing adjustment can be set as well.
5. After finishing taking a photo, there is a preview of the photo in small size.

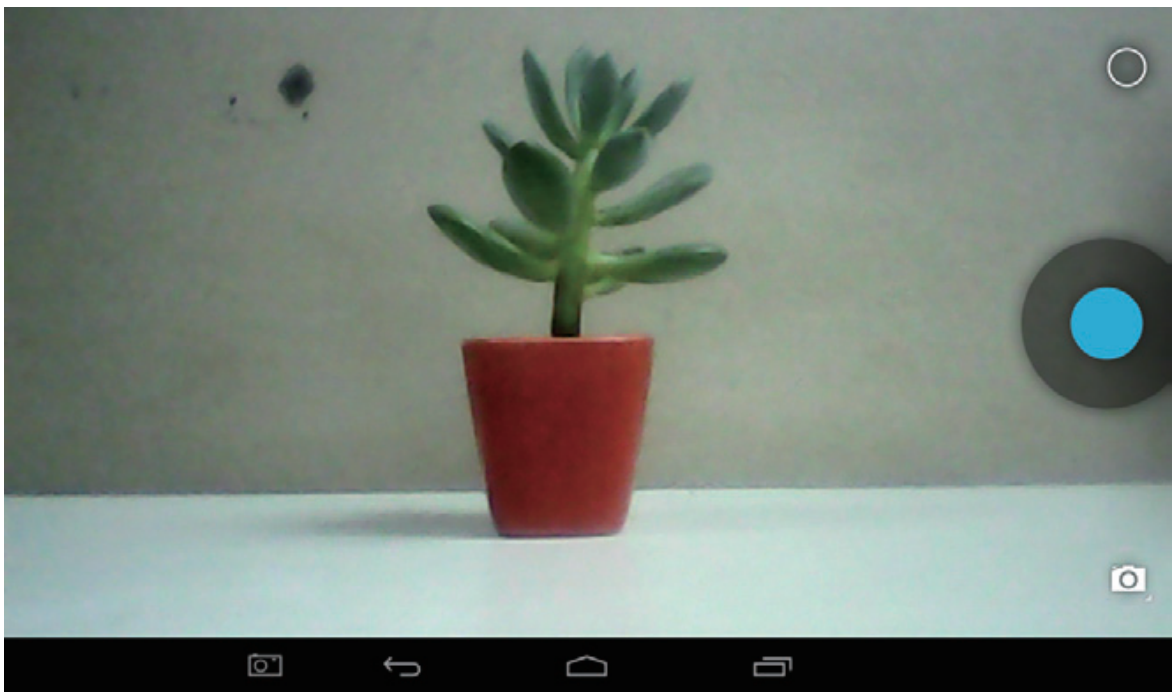

Video recording functions

1. Drag up the switchover button to switch it into the video recording mode.
2. Click the **red Video Record** button to perform video recording.
3. Other functions like color effect, white balance and video quality can also be set.
4. Click **Video Record** button again to stop video recording, with the previous video being able to be seen.

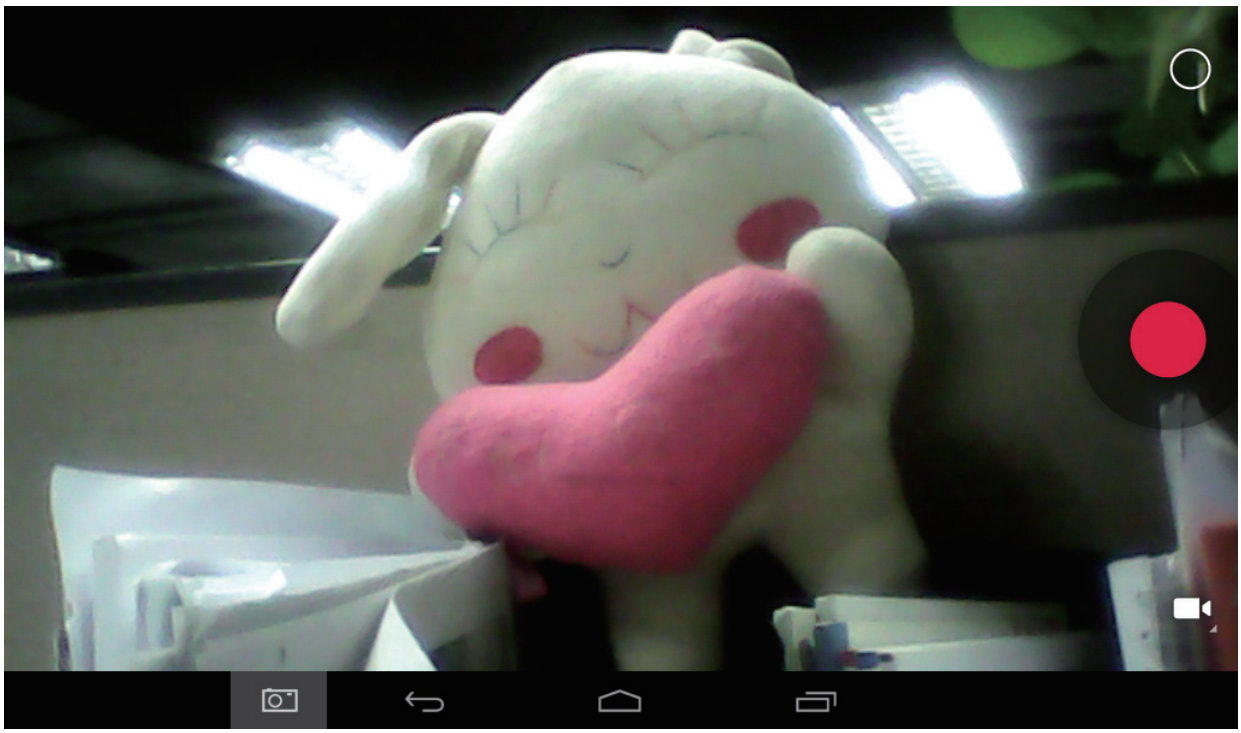

6.4 Gallery

Using the Gallery application program, you can automatically search all photos and video files in MID and in USB device (including TF card). Moreover, the Gallery will classify such photos and video files by these folders. You can use the Gallery program to view and edit photos, take photos as wallpapers as well as viewing

videos.

Check pictures

1. Click the intended folder to check pictures included.
2. Click the intended pictures that will be played in full screen mode.
3. When touching the screen, arrows will appear on the left side and right side of the picture, with the previous/next picture being able to be seen by clicking the arrow.
4. When touching the screen, the zoom-panel will appear under the pictures; with the pictures being able to be zoomed.
5. Skills: Gallery supports automatically rotating function. Rotating your MID, the picture will automatically follow the direction according to the way you rotate your MID.

Edit and set images

Press the menu button to display images in full screen mode, you can select the intended image to edit and set the image according to your needs.

- **Slide presentation**
  Open the pictures and click **slideshow**. All the images can be shown in the slide folder for broadcasting.
- **Sharing**
  1. Press the menu button and click "**share**".
  2. The picture will be shared with your friends via **Twitter, Facebook, Messaging, Gmail** or **Email.**

- **Rotating**
  1. Press the menu button and click "More".
  2. Click Rotate Left or Rotate Right.

- **Crop**
  1. Press the menu button, click "**More**" and select "**Crop**"
  2. Click the image and drag a related region of the image you want,
  3. Adjust the size you want, click "**Save**".
  4. If you want to quit cropping the image without saving it, click "**Discard**" and return to the Gallery.

Video preview and play

Operating the Gallery application, you can scan all video files in the MID and in the USB device (including TF card), as well as previewing playable video files. Click one of them to play.

In the video preview interface, press Menu button, with the

function window appearing for editing video files as is shown below

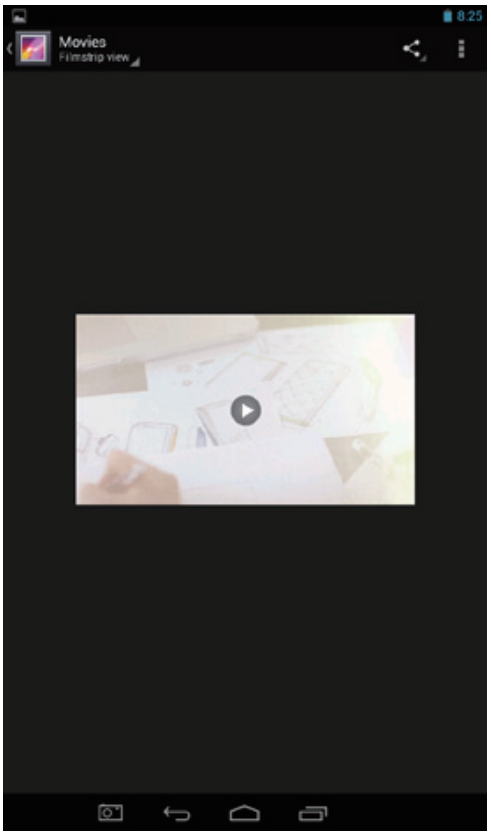

07 Internet

7.1 Browser

Enter into homepage

The browser always habitually shows the last homepage visited by user, the homepage will appear when it enters into the browser on boot.

Change your home page

1. Click **browser**.
2. Press the **Menu** button, menu of browser settings pops up.
3. Click **more**.
4. Click **Settings**.
5. Click **settings home page**.
6. Input website, and click "**OK**".

Browse website

You can slide the screen up and down to browse the webpage.

Enlarge or shrink pages

Opening a webpage and dragging it, the webpage enlarging and zoom-out button will appear at the bottom of the webpage. You can click "enlarge" or "reduce" to browse webpage.

Find the words in webpage

1. When browsing the web, press menu button and menu options pop up.
2. Click **more**.
3. Click a homepage you want to visit.
4. Enter your search projects.
5. When you input characters, words will change from white to green.
6. Click the arrow on search column to move on searching.

Management bookmarks

- **Settings webpage bookmarks**
  1. Go to a webpage in the browsing interface.
  2. Press the menu button and click the **bookmarks**, then click

add bookmarks.

3. Edit bookmarks and click **OK**.

- **Opening bookmarks**
  1. Press the menu button and click the **bookmarks** in the browser interface.
  2. Click the intended bookmarks to open the webpage.

- **Editing bookmarks**
  1. Press the menu button and click the bookmarks in the browser interface.
  2. Click and hold the bookmarks to open the menu options.
  3. Click the edit bookmarks to edit it, and click Ok.

Use the browser window

- **Open a new browser window**
  1. Open the browser window; click the menu button and click new window.
  2. Input the website address in the new window.

- **Switch browser window**
  1. In the browser window, press the menu button and click **windows**.
  2. Click the window you want to open.

- **Set browser**
  In the browser interface, press the menu button and click **more,** then click **Settings** to set the browser.

08 Other applications

8.1 Alarm clock

1. Click the Clock program.
2. Enter into programming interface as the picture is shown below.
3. There were pictures, music, alarm clock and page buttons
4. Pressing the Menu button, alarm setting menu will pop up.

8.2 Calculator

1. Click calculator.
2. Enter into the basic calculator panel.
3. Press the Menu button, and click the advanced panel.
4. Touch the digital panel or operators on the counter to calculate.

Skills: You can slide the screen to change basic panel to advanced panel.

09 Troubleshooting

1. The first time you start MID, it takes rather a long time.
After MID system upgrades, it takes about 2-3 minutes to install preloaded application software when starting it at first time. It will be faster and faster later when you start it.

2. **Disability to connect with WIFI**
   - Check whether the wireless router is at work.
   - Check whether your MID is near the wireless router, whether there are walls or other obstacles preventing you from wireless router.
   - Check whether the user name and the password are correct.

3. **You feel a little bit hot of your MID.**

If you operate many programs at the same time or the brightness of the screen is very high, it is normal to feel a little bit hot of your MID because of costing more electricity.

4. **The system is abnormal.**

Installing the 3rd party program may result in failure operation, press RESET (near power connector) to reset the system.

5. **Disability of setting an Email and program login.**
   - Check whether the network is normally connected with Internet
   - Check whether Email setting is appropriate.
   - Check whether the time of MID system is the same as the local time

Annex 1 Specifications

Specification	
Product Name	Android Smart Tablet
Model Name	GT-7303
Type	Android Full touch Tablet
Chipset	Rockchip3168 Dual-Core 1.2GHz Cortex A9
Display	7inch 1024x600 TN Display
Touch Screen	5points capacitive touch screen type(G+P)
Camera	Front 0.3MP FF / Rear 1.3MP FF
Battery	3,000mAh Li-Polymer
Memory	RAM 512MB + ROM 4GB (Include system memory)
Wi-fi	802.11 b/g/n